

NEW

TOMMY GATE® V2 SERIES

# V2 SERIES

## The New Internal Van Lift

The latest in liftgate technology, the V2 Series by Tommy Gate provides the maximum platform loading area while occupying the smallest possible space when stored in the rear of the van. The V2 combines sleek modern engineering with hands-free platform open and close, built-in wheeled retention ramp, and 1100lbs. of lifting capacity.

### 1 RETENTION RAMP

Dual-action retention ramp handle is designed for convenient foot activation at ground level as well as hand activation at bed height.

### 2 BRIDGE MOUNT

Aluminum treadplate bridge mounts provide smooth transition for moving cargo to and from lift platform to vehicle bed.

### 3 TWO-FUNCTION CONTROL

Pendant control with raise/lower toggle and secondary platform fold function.

### 4 LOW-PROFILE PUMP BOX

Pump and motor housing fits compactly over the wheel well. The pump box can also be relocated with our Pump Box Relocation Kit. (optional)



MODEL V2-56-1140 FA49



## AVAILABLE MODELS

	Model Number	Load Area	Taper	Travel	Applications	Gate Weight
1100 lb.	Framed Aluminum					
	V2-56-1140 FA34	47 x 34	9	40	B	410
	V2-56-1140 FA49 <sup>1</sup>	47 x 49	9	40	A	445
1100 lb.	Framed Aluminum					
	V2-47-1140 FA42 <sup>2</sup>	38 x 42	9	40	C	405

### NOTES

- FA49 Models must have the 9" retention ramp/taper engaged when storing the platform on lower roof van models to avoid the ramp contacting the van frame. See Application Chart below.
- Liftgate model for a Chevy Express Van ONLY.


## APPLICATION & REQUIRED BRACKET<sup>3</sup>

Manufacturer	Model Year	Body Style	Roof Height					
			Low		Medium		High	
			Application	Bracket	Application	Bracket	Application	Bracket
Ford <sup>8</sup>	2015 - 2021	TRANSIT®	B	15794	A, B	15230	A, B	15230
Ford <sup>8</sup>	2015 - 2021	TRANSIT® <i>Extended Body</i>	-	-	-	-	A, B	15418
Ram	2014 - 2021	Ram Promaster	A <sup>4</sup> , B	15608	-	-	A, B	15608
Ram	2014 - 2021	Ram Promaster <i>Extended Body</i>	-	-	-	-	A, B	15644
Sprinter <sup>5</sup>	2007 - 2021	144" WB 1500/2500	A <sup>4</sup> , B	15966	-	-	A, B	15966
Sprinter <sup>5</sup>	2007 - 2021 <sup>6</sup>	170" WB Non-Extended 2500	-	-	-	-	A, B	15323
Sprinter <sup>5</sup>	2007 - 2021 <sup>6</sup>	170" WB Extended 2500/3500/4500	-	-	-	-	A, B	16302 <sup>7</sup>
Nissan	2011 - 2021	NV	B	15576	-	-	A, B	15576
Chevrolet/GMC	2011 - 2021	Express/ Savana	C	17508	-	-	-	-


### NOTES

- Additional applications may be available. Contact factory for more information.
- Retention ramp must be engaged when storing liftgate to avoid damage to vehicle.
- Mercedes-Benz requires the use of an auxiliary battery for all liftgates installed on SPRINTER® vans.
- 2019-2021 170" WB must have one of these factory installed options: V43 (wood floor), V39 (plastic floor), ZE6 (shelving prep)
- This application requires a 37-foot power cable. Option E3. See Price List for more information
- 2015-2019 Ford Transit® installations may require a separate connection point kit to be ordered from Ford. See Installation Instructions or contact customer service.

SIDE VIEW

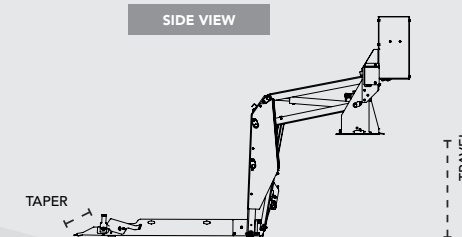

TOP VIEW

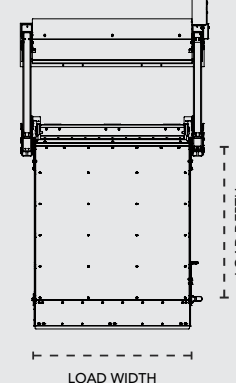

### IMPORTANT

- V2 Series liftgates are not compatible with floor-mounted rear heat or rear air conditioning.
- V2 Series liftgates reduce the door opening height by 2" (from the metal floor).



The All New Expanded V2 Series Line of Liftgates

# COMMERCIAL VANS

TOMMY GATE



www.anjerinc.com sales@anjerinc.com 800-326-5373



1300 LBS  
CAPACITY



MODEL CVL-AA-1330 EF71

## CANTILEVER SERIES

### The External Van Lift

Cantilever Series models are highly versatile and include a bolt-on under-side mount, corrosion-resistant aluminum platform, and foot-activated cart stops. The laterally-folding platform allows for access to the rear of the vehicle without operating the lift. Easy to use and highly efficient, Cantilever Series models are aesthetically pleasing as well as logistically practical.

**1 EASY TO USE**

Platforms support a large loadable area and come standard with dual cart stops and internal bridges.

**2 FOOT-ACTIVATED CART STOPS**

Secure wheeled cargo.



The Cantilever Series features internal bridges, dual cart stops, remote pendant control, and maintenance-free components.



**LEFT:** the larger platform (EF71) features 60 inches of loading depth and is recommended for higher-roof vans only.

**RIGHT:** the smaller platform (EF52) features 40 inches of loading depth and is ideal for low-roof vans

### AVAILABLE MODELS


Model Number	Load Area	Depth	Travel	Gate Weight
<b>1300 lb. Lifting Capacity</b>				
MB SPRINTER® 3 2007-2021 2500 All Styles / 3500 170" WB & 170" WB Extended Body 4				
CVL-AA-1330 EF71 1	53 x 60	71	30	610
CVL-AA-1330 EF52	53 x 40	52	30	570
MB SPRINTER® 3 2007-2021 3500 144" WB 4				
CVL-AB-1330 EF71 1	53 x 60	71	30	610
CVL-AB-1330 EF52	53 x 40	52	30	570
Nissan NV® 2011-2021				
CVL-AC-1330 EF71 1	53 x 60	71	30	610
CVL-AC-1330 EF52	53 x 40	52	30	570
Chevrolet / GMC EXPRESS®/SAVANA® 2011-2021				
CVL-AD-1330 EF52	53 x 40	52	30	570
Ram Promaster® 2014-2021 1500/2500/3500, 118", 136", & 159"WB (excludes extended body) 2				
CVL-AE-1330 EF71 1	53 x 60	71	30	610
CVL-AE-1330 EF52	53 x 40	52	30	570
Ram Promaster® 2014-2021 3500, 159"WB Extended Body (ONLY) 2				
CVL-AH-1330 EF71 1	53 x 60	71	30	610
CVL-AH-1330 EF52	53 x 40	52	30	570
Ford Transit® 6 2015-2021 150/250/350, 130", & 148"WB (excludes extended body)				
CVL-AF-1330 EF71 1-5	53 x 60	71	30	610
CVL-AF-1330 EF52	53 x 40	52	30	570
Ford Transit® 6 2015-2021 250/350, 148"WB Extended Body (ONLY)				
CVL-AG-1330 EF71 1-5	53 x 60	71	30	610
CVL-AG-1330 EF52	53 x 40	52	30	570

### NOTES

- EF71 platforms are recommended for higher-roof van models only.
- Ram Promaster applications (AE & AH) require exhaust hanger modification.
- Sprinter applications (AA & AB) may require exhaust modification (varies by model).
- Mercedes-Benz requires the use of an auxiliary battery for all liftgates installed on SPRINTER® vans.
- Ford Transit® "medium-height" models are compatible with EF71 platform.
- 2015-2019 Ford Transit® installations may require a separate connection point kit to be ordered from Ford. See Installation Instructions or contact customer service.

### IMPORTANT

- Installation may affect specific vehicle features such as rear/side sensors and rear cameras.
- Installation is not compatible with any form of towing hitch.
- Installation requires the spare tire to be relocated.

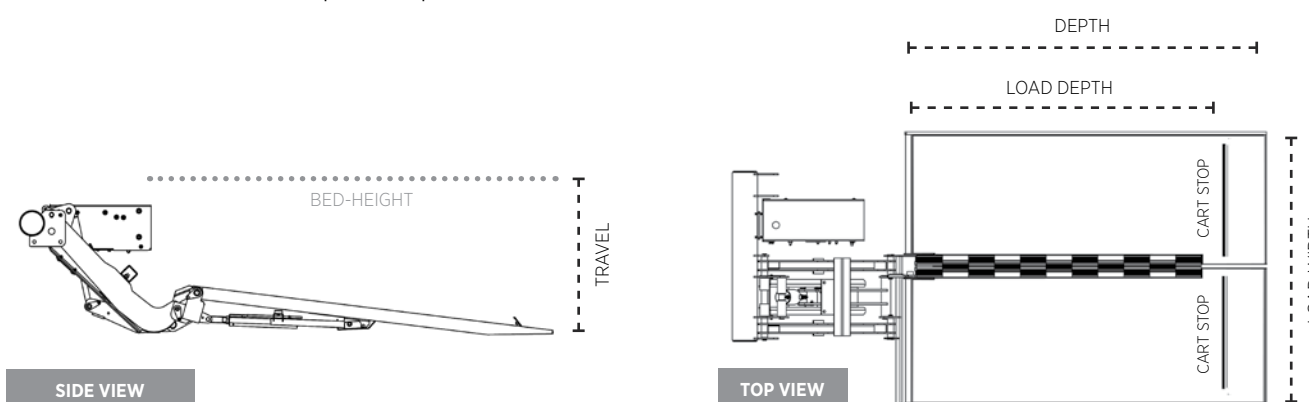

650 LBS  
CAPACITY

## 650 SERIES

### The Lightweight Van Lift

Low-capacity, compact, and internally-mounted, the 650 Series is an excellent option for lightweight van applications. 650 Series models fold up and store out of the way of ordinary tasks or flat against the inside of the rear door.

**1 TWO STORAGE POSITIONS**

Fold-away interior mount offers access to the rear of the van.



### APPLICATION & REQUIRED BRACKET 1

Manufacturer	Model Year	Body Style	Bracket
Chevrolet / GMC	2002-2005	ASTRO® / SAFARI®	2400
Chevrolet / GMC	1996-2021	EXPRESS® / SAVANA®	2410
Chevrolet / GMC	2015-2018	CITY EXPRESS®	13319
Dodge/Ram	2014-2021	Ram Promaster (standard roof)	13080
Dodge/Ram	2014-2021	Ram Promaster (high roof)	13498
Dodge/Ram	2015-2021	Promaster City	14502
Ford	1992-2014	E-Series	2408
Ford	2010-2013	Transit Connect®	10179
Ford	2014-2021 3	Transit Connect®	13694
Ford 4	2015-2021	Transit (standard roof)	13821
Ford 4	2015-2021	Transit (medium roof)	14012
Ford 4	2015-2021	Transit (high roof)	13914
SPRINTER®	2002-2006	Standard Roof	2397
SPRINTER®	2002-2006	High Roof	2398
SPRINTER® 2-5	2007-2021	Standard Roof	2632
SPRINTER® 2-5	2007-2021	High Roof	2633
NISSAN	2013-2021	NV200	13319

### NOTES

- For more applications, visit [www.tommygate.com](http://www.tommygate.com)
- 2007-present SPRINTER® models may be equipped with a rear step bumper that is not compatible with a Model 650 liftgate.
- The application for the 2014-2021 Ford Transit Connect CAN NOT rotate inward and store against the driver side wall.
- 2015-2019 Ford Transit® installations may require a separate connection point kit to be ordered from Ford. See Installation Instructions or contact customer service.
- Mercedes-Benz requires the use of an auxiliary battery for all liftgates installed on SPRINTER® vans.